



Recess & Exact (Outside) Fitting Explained

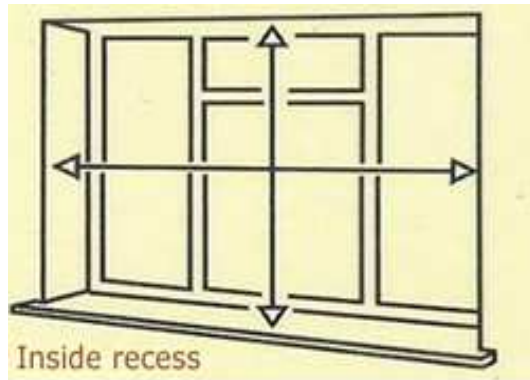

Recess Inside the window frame- This measurement should be calculated by measuring the drop from the top of the recess to the window sill in three places and the width by measuring the recess from wall to wall in 3 places.

Do not deduct from your sizes. We deduct 10-12mm from the width if specified inside the recess.

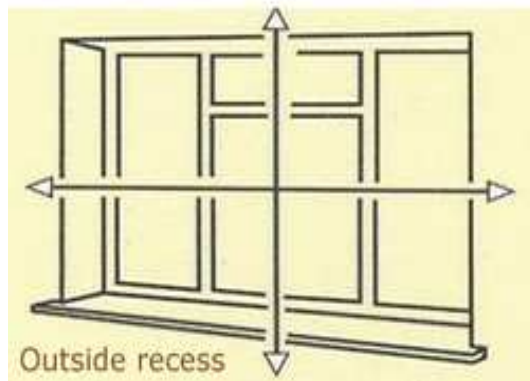

Exact Outside the Window Frame

This is the measurement that your blind will be made to.

It is advisable to have an overlap of 75millimetres on the width and the drop.